TARO SOFTWARE

# WIRING DIAGRAM

## ARMOR TYPE 1

### Standard Wiring

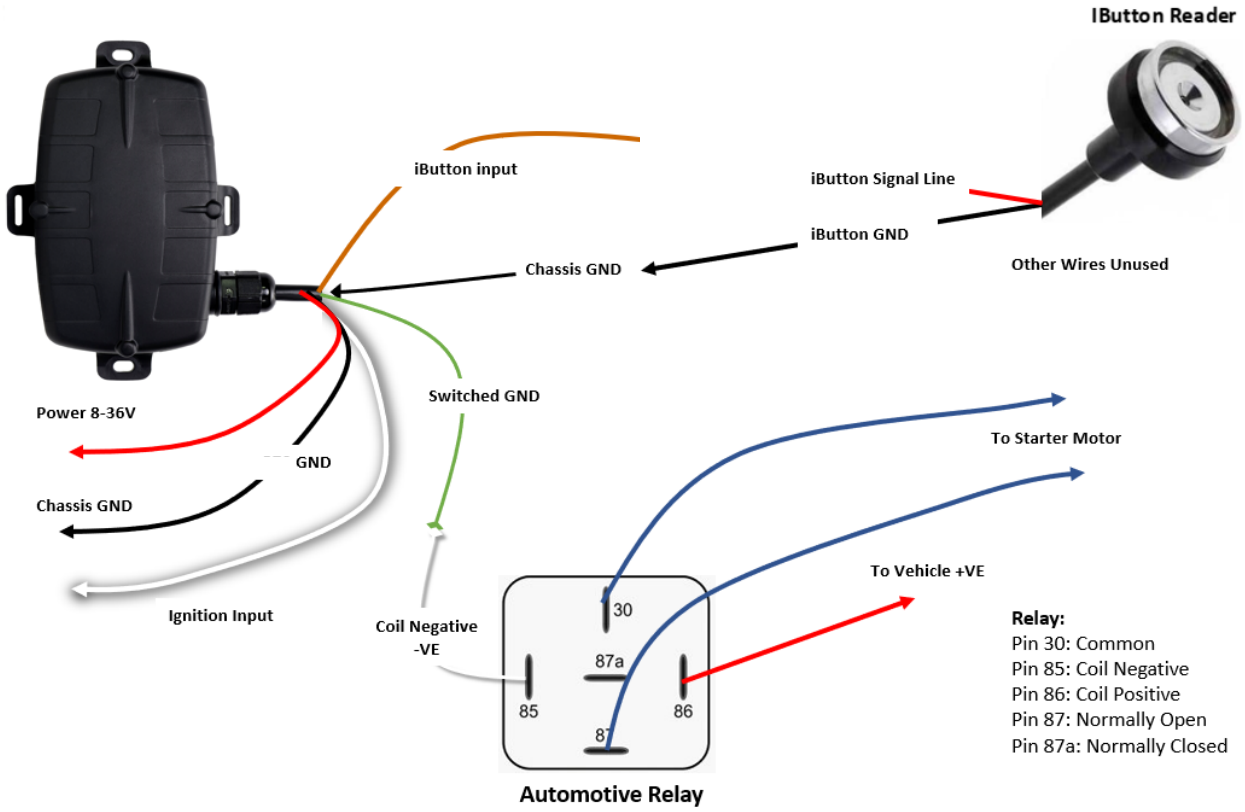


**Relay:**
Pin 30: Common
Pin 85: Coil Negative
Pin 86: Coil Positive
Pin 87: Normally Open
Pin 87a: Normally Closed